



CHILL DOCK



USERS MANUAL



We want to thank you for buying the ZIMZALA Chill Dock. Please read the following instructions before using this raft. This Platform Dock Raft has been manufactured to the highest industry standards.



SAFETY PRECAUTIONS

1. WARNING: Dock is designed for use in sheltered water only.

2. WARNING: This is not a toy. Adult supervision is required. This is not a life saving device. Use only under competent supervision. Never allow diving or jumping onto or off this product. Never leave in or near the water when not in use. Always deflate and store after use. Always wear a USCG approved Type III PFD when using this product. This product should never be towed or used for snow sledding. Never use this product in the surf zone or high rushing water. Do not swim under platform. Do not dive from platform. Failure to comply could lead to injury or death.

3. WARNING: Inflate the product as outlined in Assembly. **PRODUCT USE:** Inflate to 8 PSI. Do not over inflate. Excessive inflation of the product can cause it to burst or cause damage to the seams. It is crucial that the docks pressure be reduced during prolonged use in direct sunlight. Also, in cold conditions, the pressure may decrease and more air will need to be added to ensure proper inflation. Please use a gauge.

4. WARNING: A Certified Personal Flotation Device (PFD) is required for the user. It is especially important that children and non-swimmers wear a PFD at all times. Children and non-swimmers need special instruction in the use of the Personal Flotation Device.

5. WARNING: Do not use your dock if you suspect a puncture or leak. It may be unsafe.

6. WARNING: Beware of offshore winds and currents. Adhere to local water safety rules and boating regulations.

7. WARNING: The total number of persons and total weight shall not exceed the information printed below.

CAPACITIES

ITEM	DIMENSIONS	CAPACITY	WEIGHT
ZCD0508	5' X 8' X 6"	2-4 PEOPLE - WT CAPACITY 1,000 LBS.	24 LBS.
ZCD0707	7' X 7' X 6"	3-5 PEOPLE - WT CAPACITY 1,300 LBS.	26 LBS.
ZCD1010	10' X 10' X 6"	4-6 PEOPLE - WT CAPACITY 1,700LBS.	57 LBS.
ZRR0435	4' X 3.5' X 6"	1 DOG WATER RAMP - WT CAPACITY 75 LBS.	12 LBS.

ZIMZALA™

CHILL DOCK


UNPACKING & INFLATION INSTRUCTIONS



Before unpacking, make sure pkg is intact. Take dock out of box. Avoid using sharp object to unpack.



Take dock out of bag and untie packaging. Stretch out dock and lay flat on the floor.

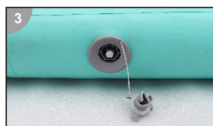

Open the inflation valve counter clockwise.



Depress the valve and turn counterclockwise.



Connect pump nozzle to air valve on dock.




Connect the pump to the valve.




Turn on pump and start to inflate. Stop inflation when the dock is solid and remove the pump.



After disconnecting the air pump, depress the valve and turn 45 degrees to shut valve.

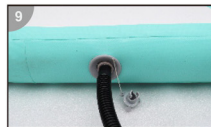

Pump in more air after valve is shut.

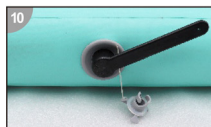

Use wrench provided to avoid leakage after the pressure reducing device. This is used to remove the valve for

FOLDING INSTRUCTIONS (5'x8')

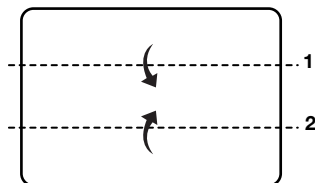


DIAGRAM 1

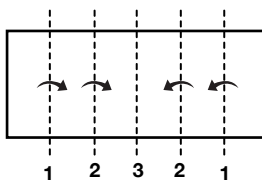


DIAGRAM 2



END VIEW

DIAGRAM 3

1. Fully deflate and lay the dock flat with top facing up.
2. Fold into thirds lengthwise as shown in diagram 1
3. Then fold the dock as shown in Diagram 2 into sixths.

4. Fold the Dock in half as shown in Diagram 3.
5. Wrap and connect the supplied strap to keep fold secured.
6. Place folded dock in carry bag.

ZIMZALA™

CHILL DOCK

FOLDING INSTRUCTIONS (7'x7')

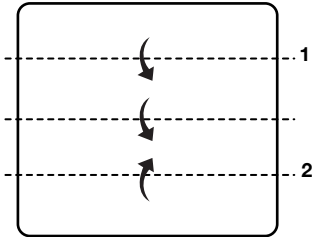


DIAGRAM 1

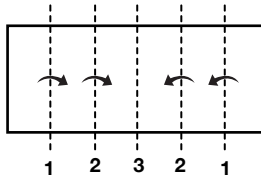


DIAGRAM 2



END VIEW

1. Fully deflate and lay the dock flat with top facing up.
2. Fold into quarters lengthwise as shown in diagram 1
3. Then fold the dock as shown in Diagram 2 into sixths.

4. Fold the Dock in half as shown in Diagram 3.
5. Wrap and connect the supplied strap to keep fold secured.
6. Place folded dock in carry bag.

FOLDING INSTRUCTIONS (10'x10')

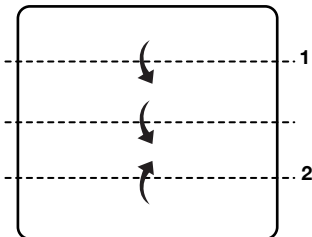


DIAGRAM 1

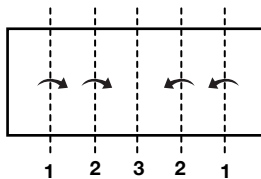


DIAGRAM 2



END VIEW

1. Fully deflate and lay the dock flat with top facing up.
2. Fold into quarters lengthwise as shown in diagram 1
3. Then fold the dock as shown in Diagram 2 into sixths.

4. Fold the Dock in half as shown in Diagram 3.
5. Wrap and connect the supplied strap to keep fold secured.
6. Place folded dock in carry bag.